keycafe

Maison Series

https://keycafe.zendesk.com/hc/en-us

ENGLISH
FRANÇAIS
ESPAÑOL
ITALIANO
日本語
中文(繁體)

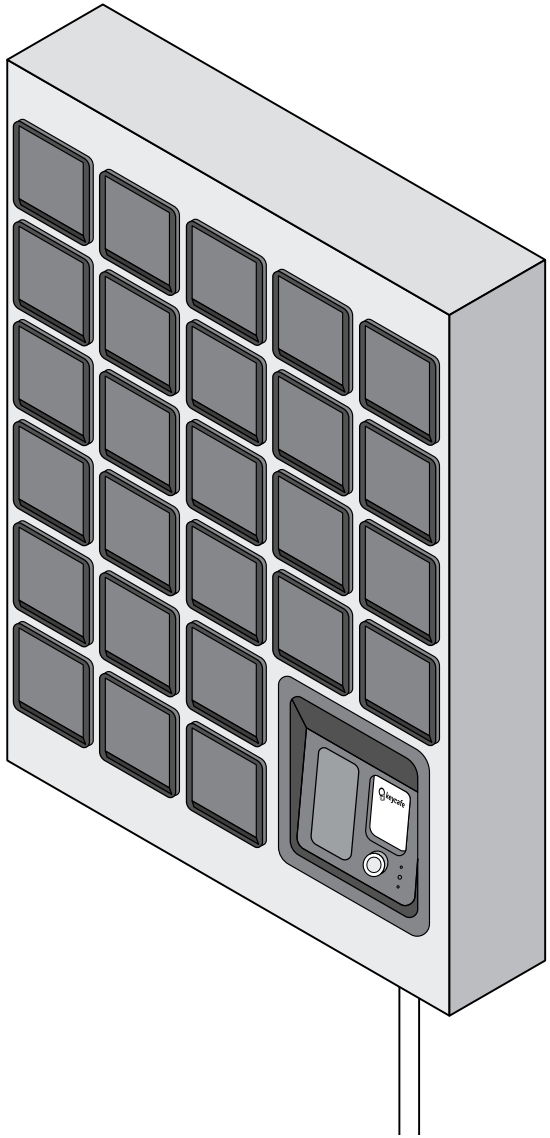

2020/09

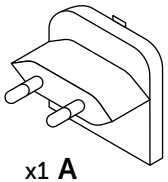

x1 **A**

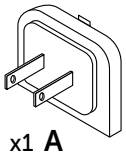

x1 **A**

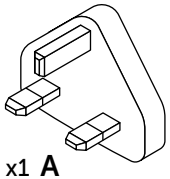

x1 **A**

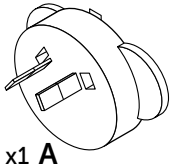

x1 **A**

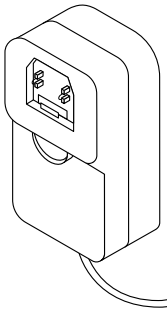

x1 **B**



E
x14



F
x2

F

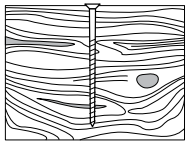

E

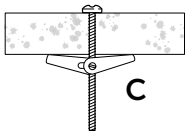

C



x2 **G**

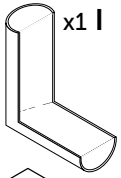

x1 **I**

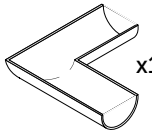

x1 **H**



x14 **C**

x3 **J**

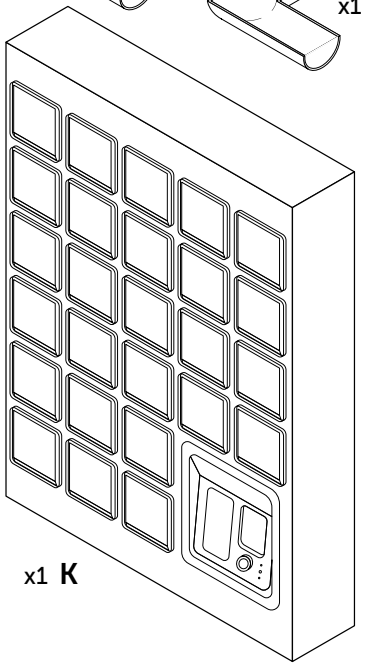

x1 **K**

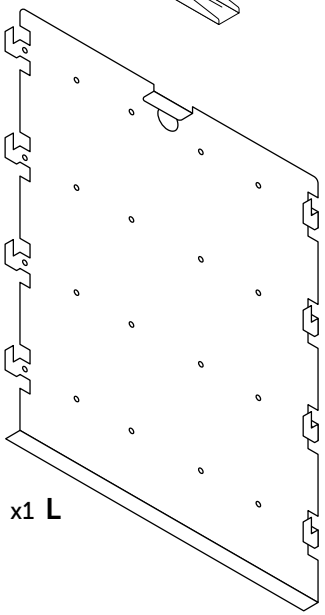

x1 **L**

7.

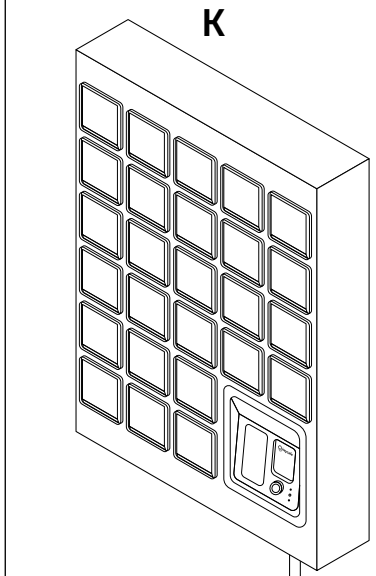

K

J

H

J

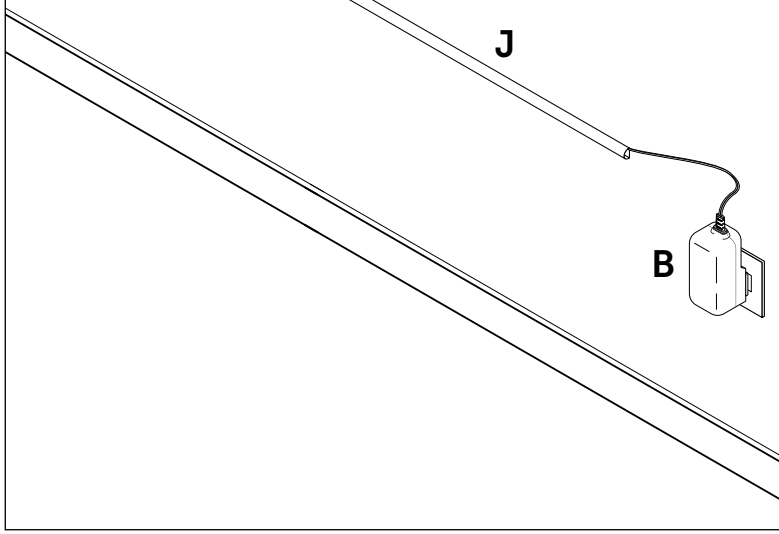

B

6.

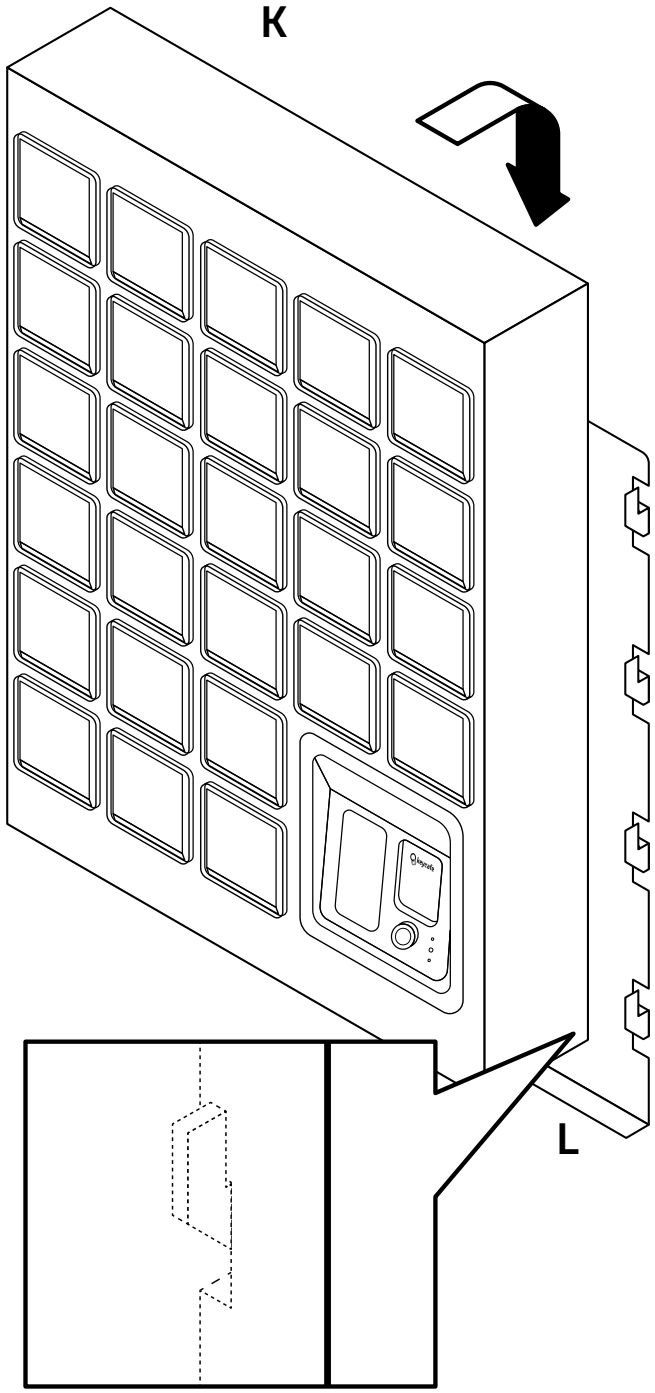

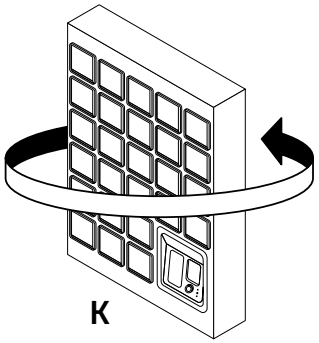

a.

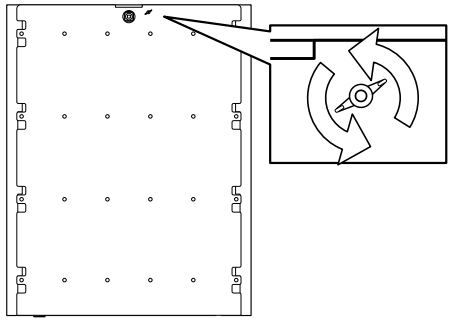

b.

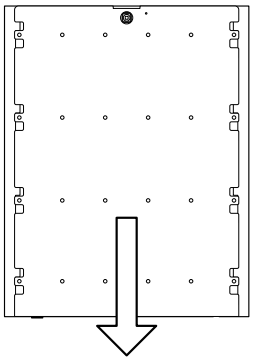

c.

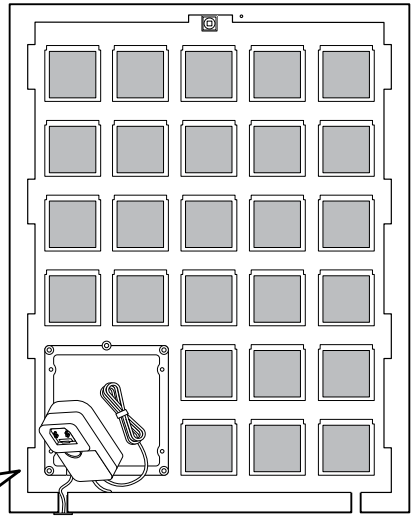

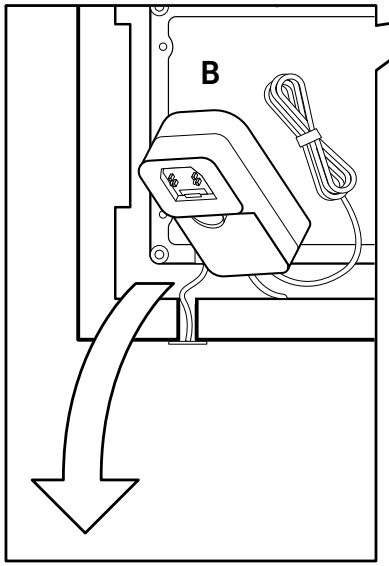

DIGITAL LOCK

IMPORTANT: The SmartBox lock requires power and a connection to open. To ensure your SmartBox can be unlocked for servicing, take the power supply out now and let it connect as the first step! Once powered and connected, the SmartBox can be unlocked using your Keycafe account.

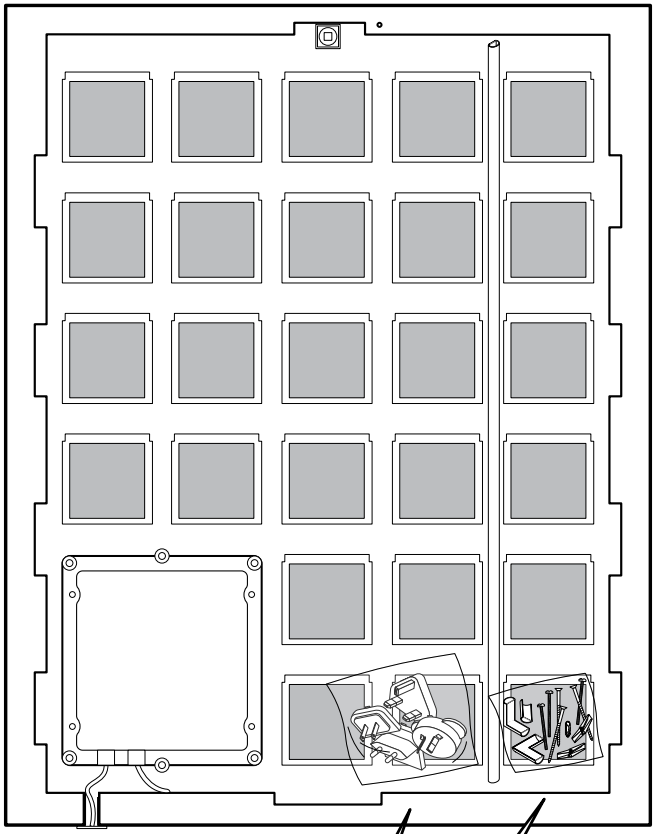

INSTALLATION KIT

Remove and use for mounting and plugging.

5.

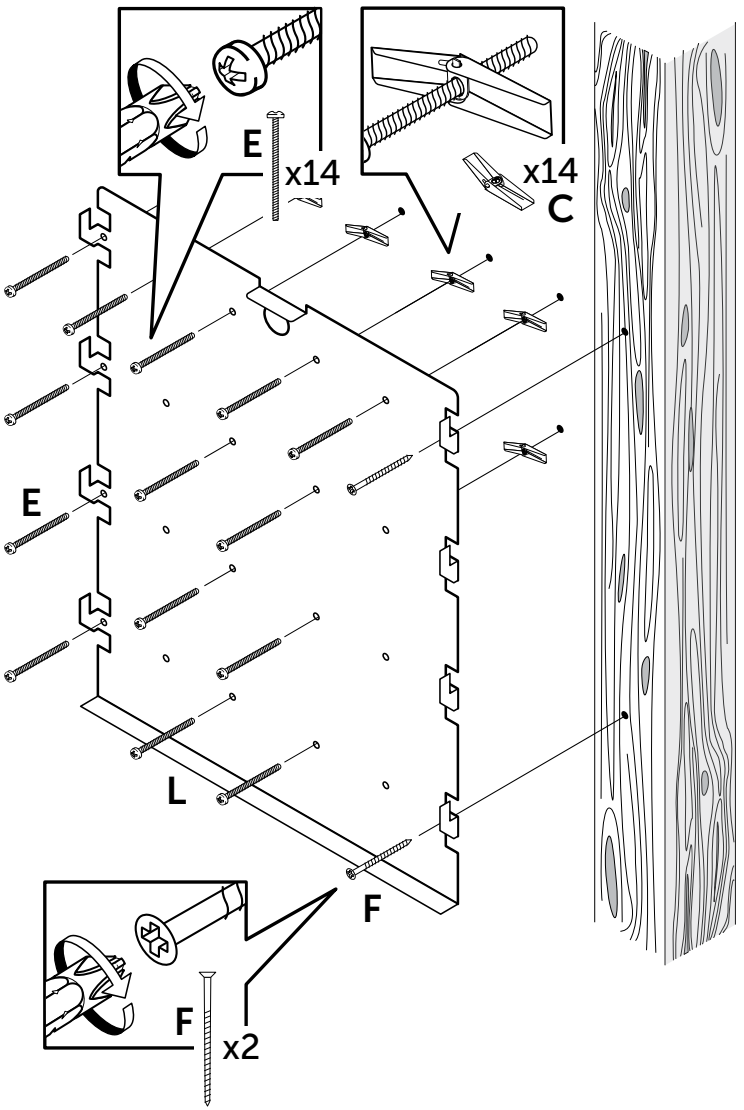

To maximize the effectiveness of the locking system, be sure to install screws on bottom row and edges of the backplate.

Important: Line up one row of holes along a stud in the wall and use the F screw.

4.

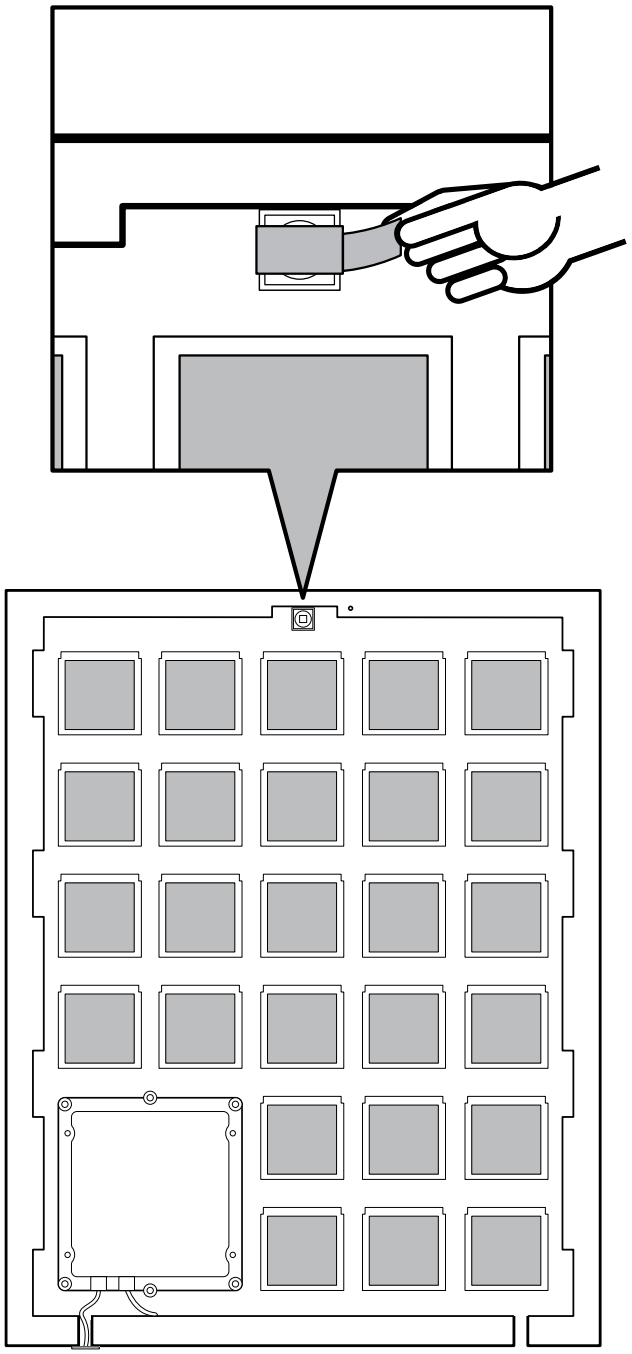

1.

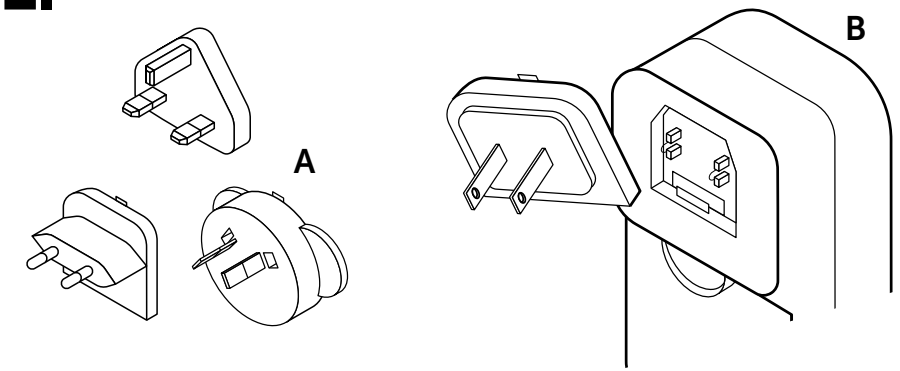

2.

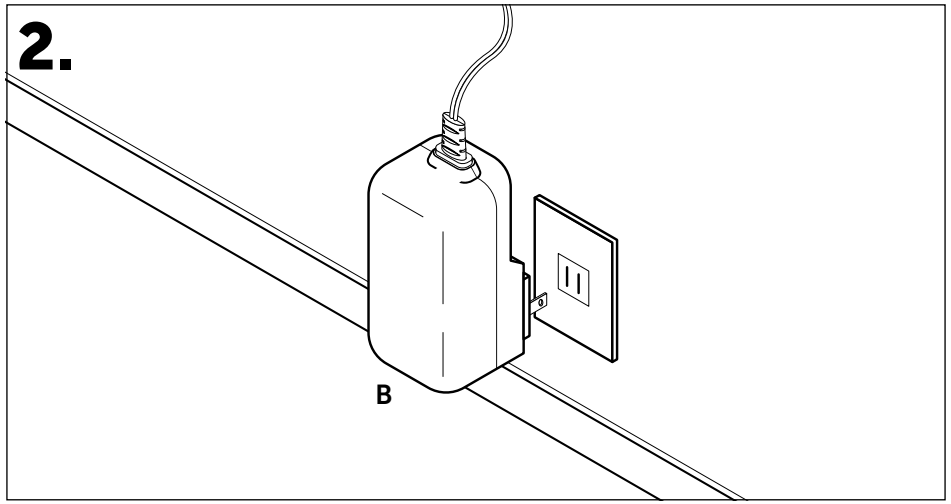

3.

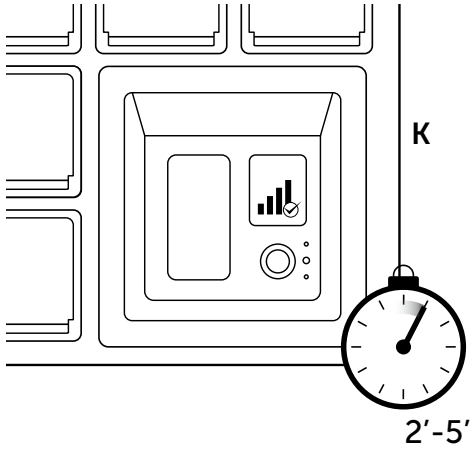

IMPORTANT: Ensure the SmartBox has a good signal and connects before starting the mounting process.

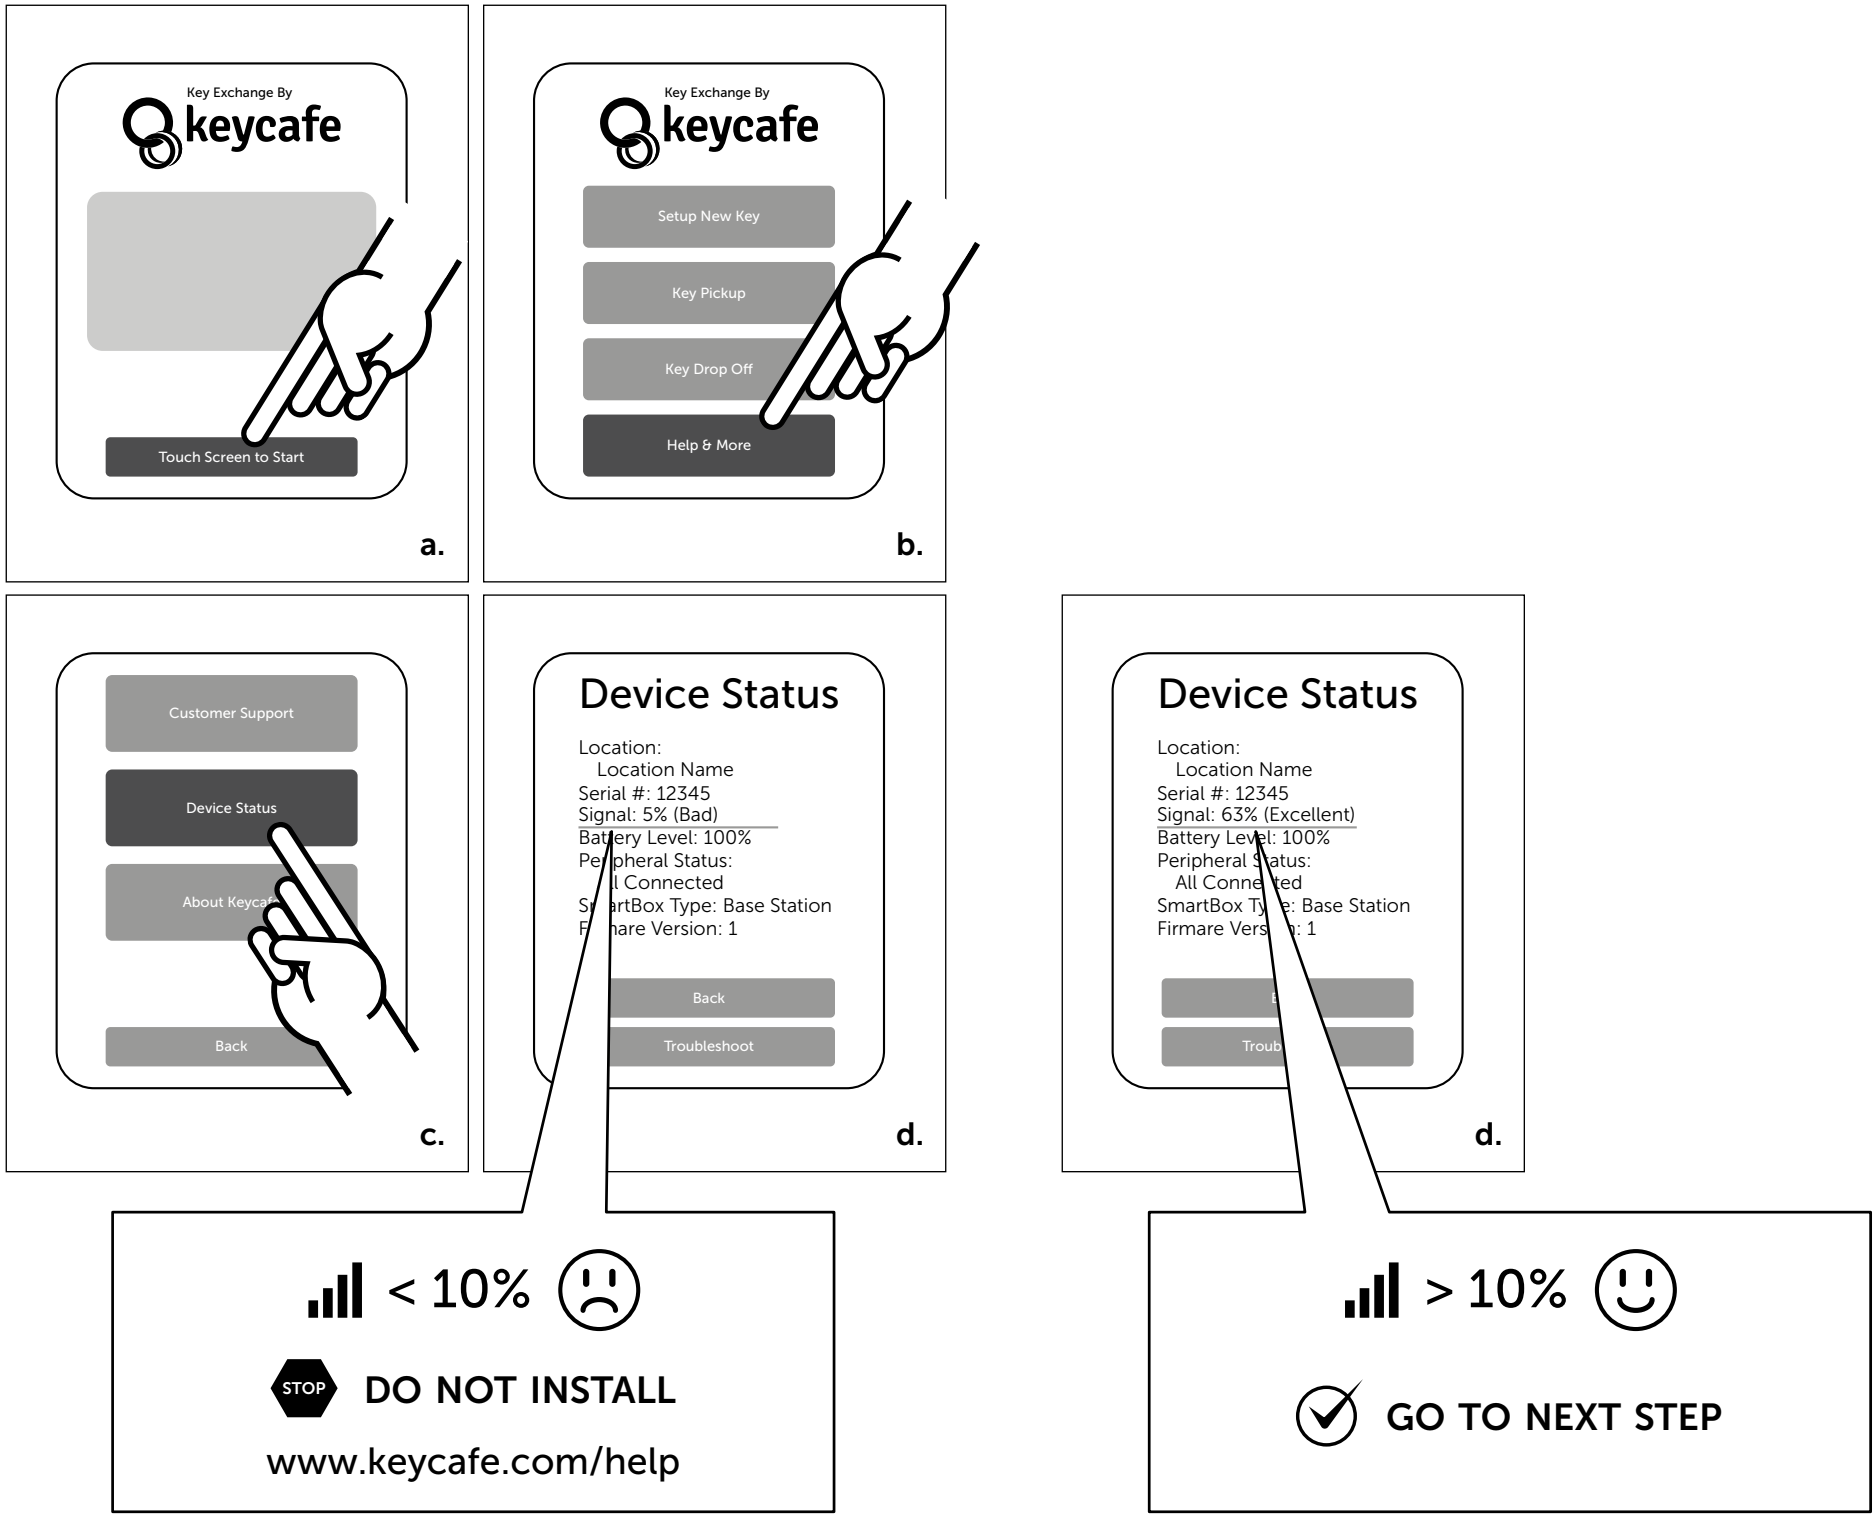
Key Exchange By
keycafe
Touch Screen to Start
a.
Key Exchange By
keycafe
Setup New Key
Key Pickup
Key Drop Off
Help & More
b.
Customer Support
Device Status
About Keycafe
Back
c.
Device Status
Location:
Location Name
Serial #: 12345
Signal: 5% (Bad)
Battery Level: 100%
Peripheral Status:
All Connected
SmartBox Type: Base Station
Firmware Version: 1
Back
Troubleshoot
d.
Device Status
Location:
Location Name
Serial #: 12345
Signal: 63% (Excellent)
Battery Level: 100%
Peripheral Status:
All Connected
SmartBox Type: Base Station
Firmware Version: 1
d.
< 10%
STOP
DO NOT INSTALL
www.keycafe.com/help
> 10%
GO TO NEXT STEP