


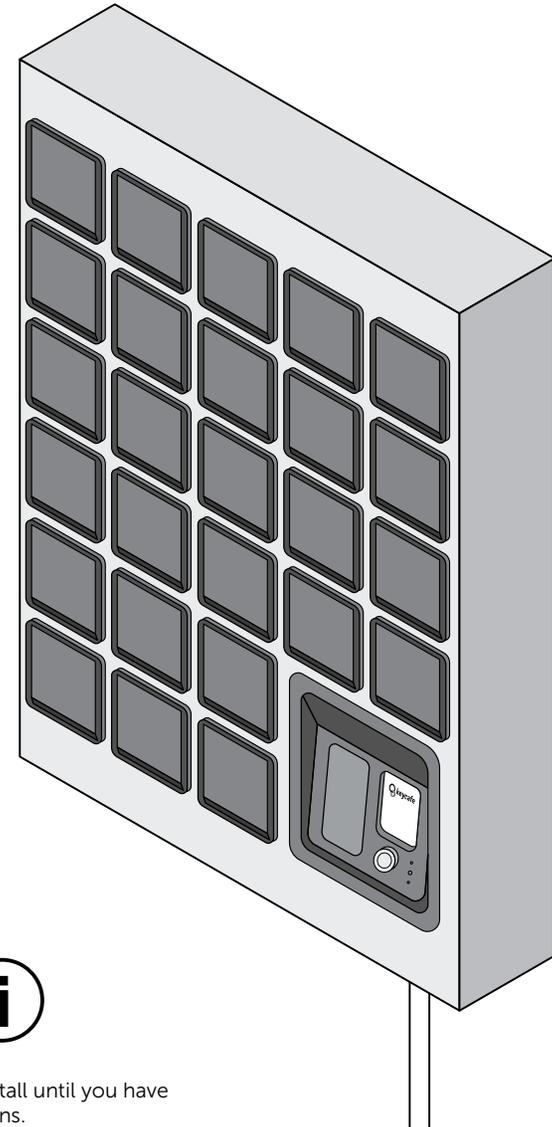



Maison X Series

<https://keycafe.zendesk.com/hc/en-us>





2020/09

STOP - Do not install until you have read the instructions.

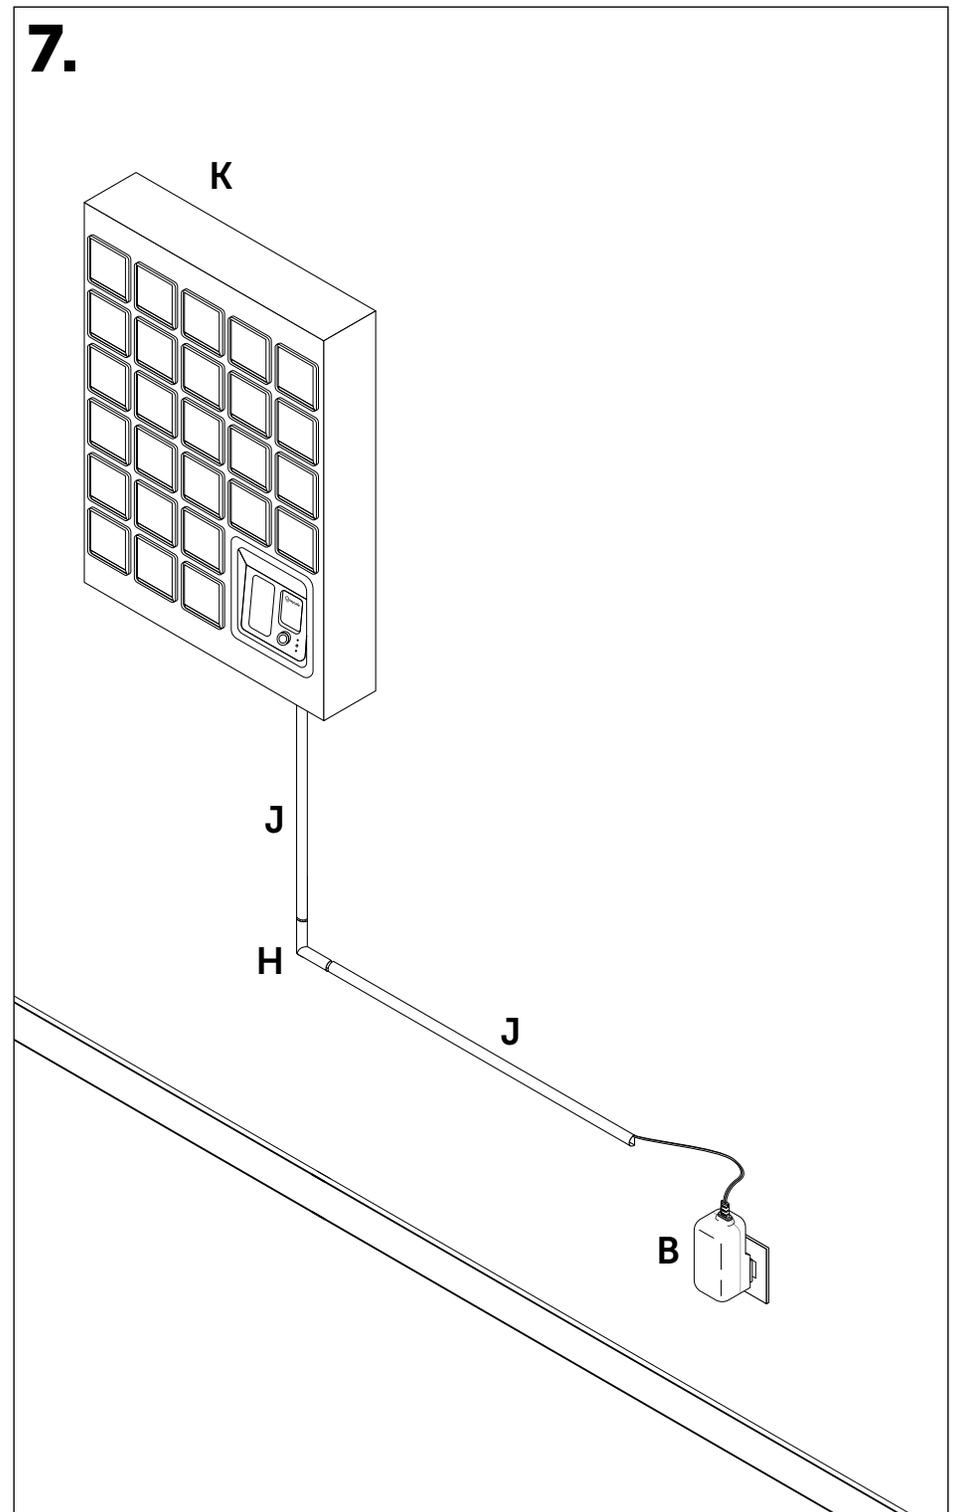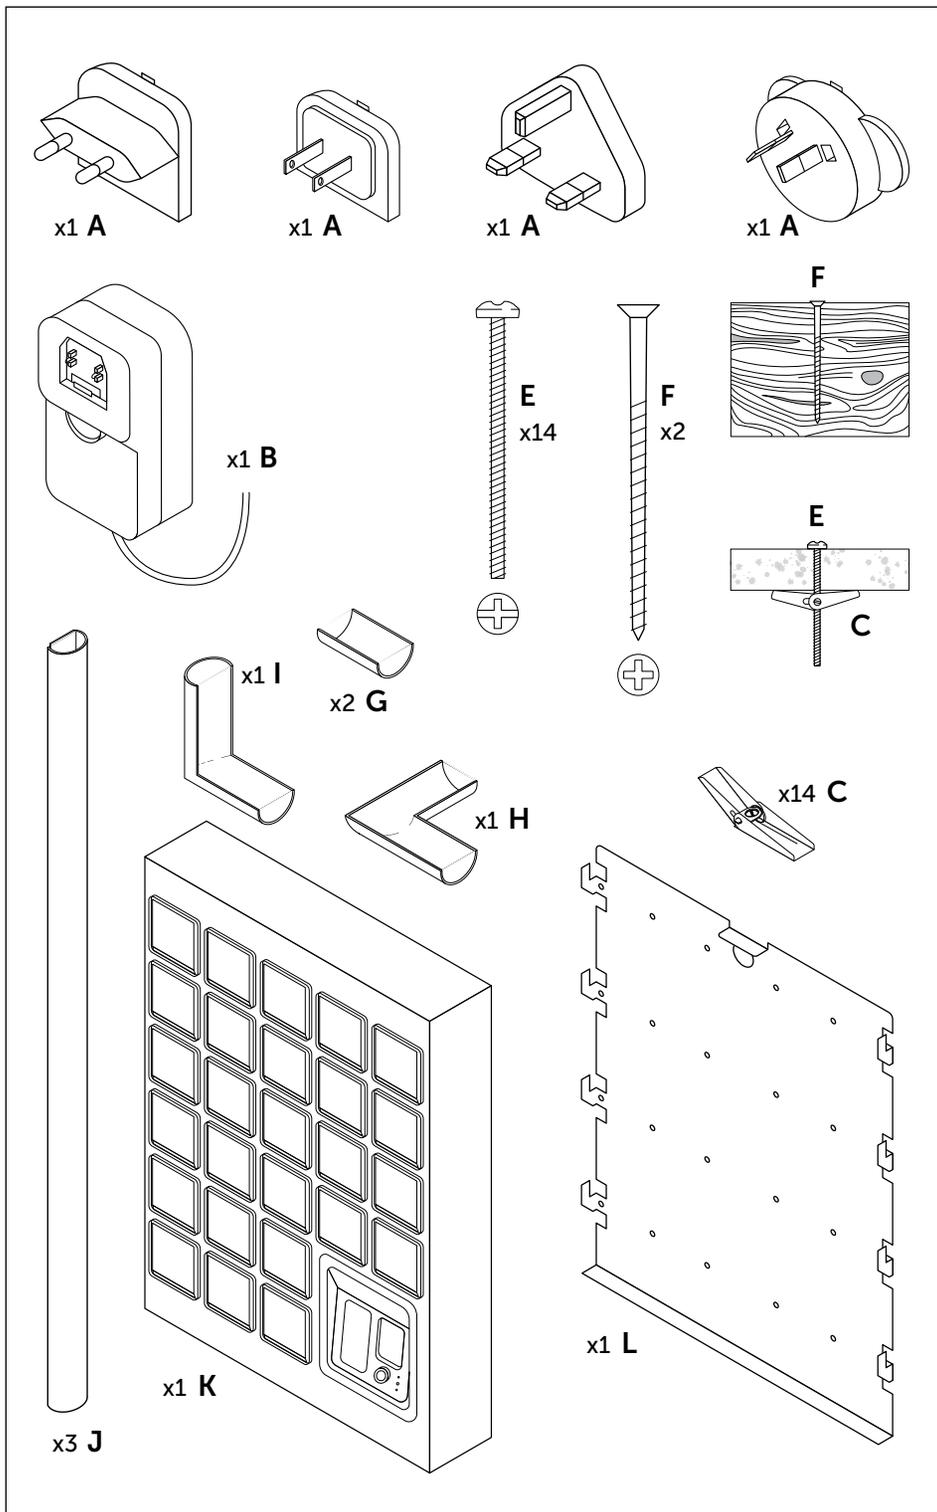


6.

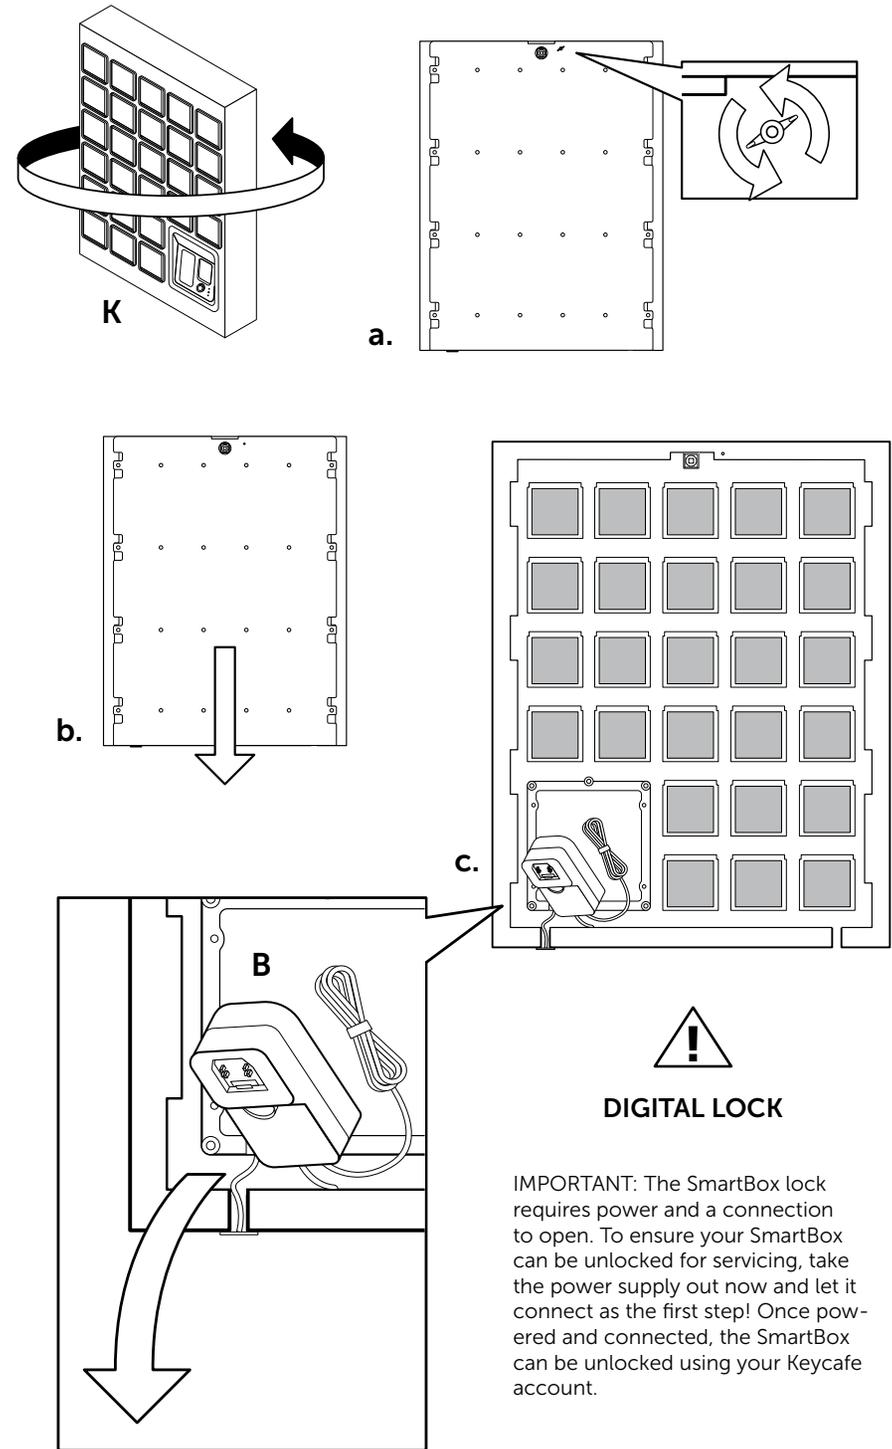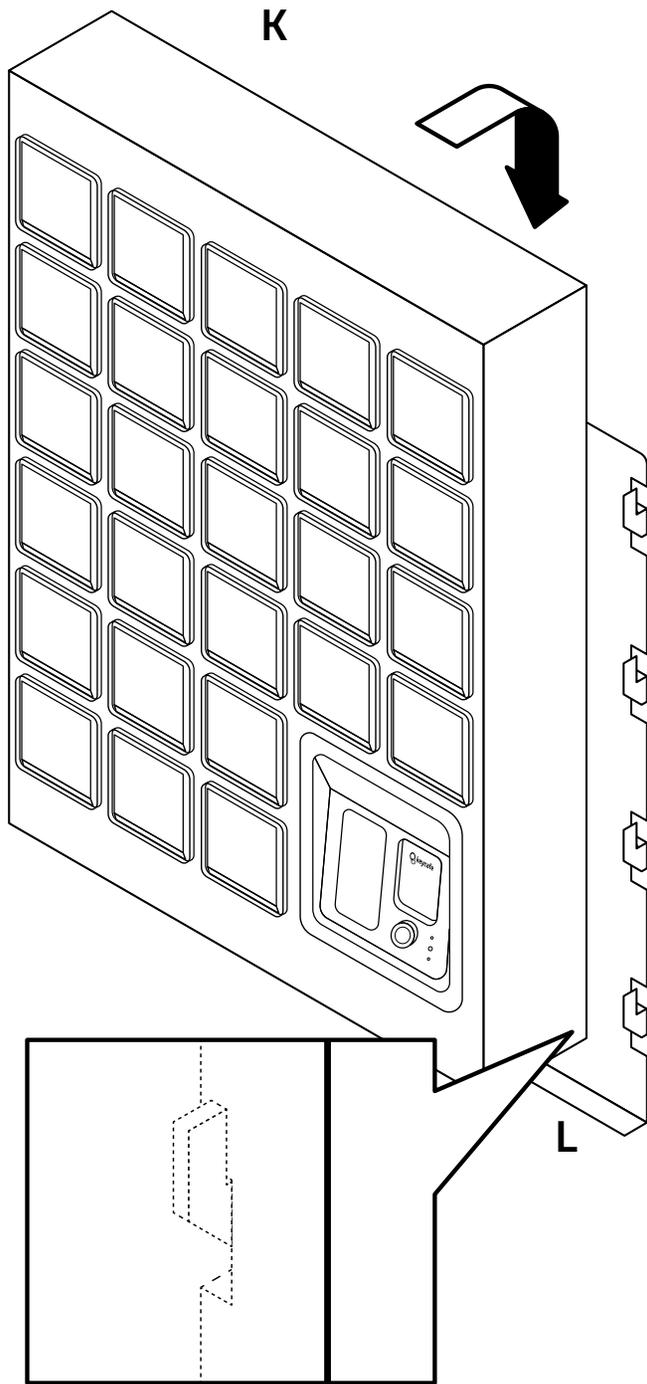


DIGITAL LOCK

IMPORTANT: The SmartBox lock requires power and a connection to open. To ensure your SmartBox can be unlocked for servicing, take the power supply out now and let it connect as the first step! Once powered and connected, the SmartBox can be unlocked using your Keycafe account.

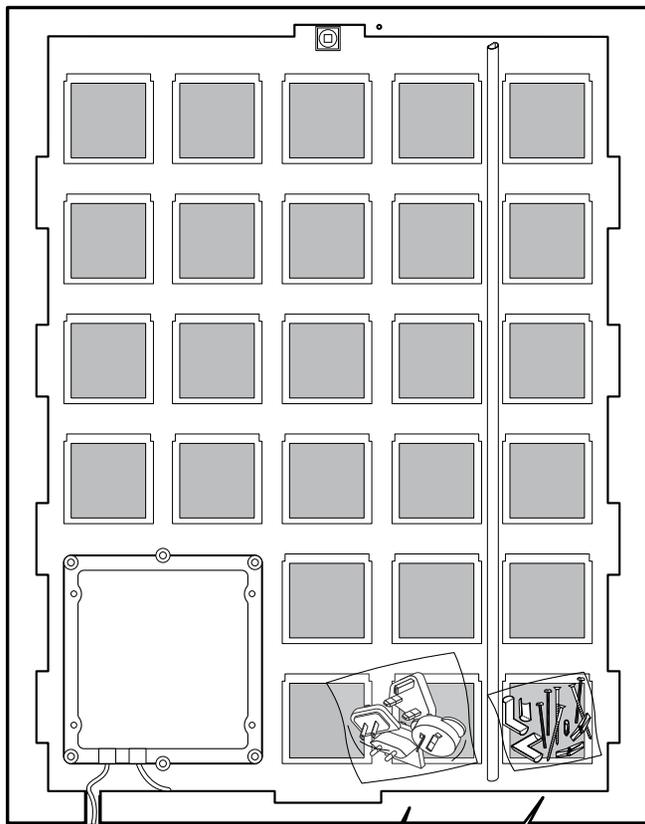

INSTALLATION KIT
Remove and use for mounting and plugging.

5.

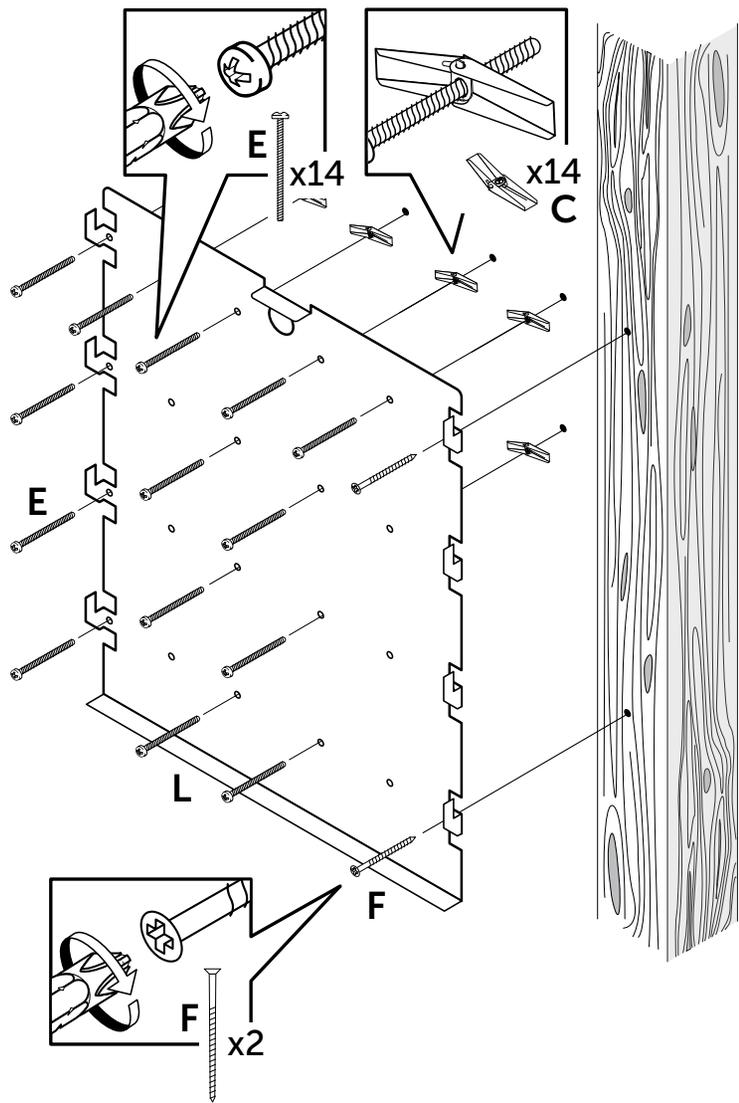


To maximize the effectiveness of the locking system, be sure to install screws on bottom row and edges of the backplate.




Important: Line up one row of holes along a stud in the wall and use the F screw.


4.

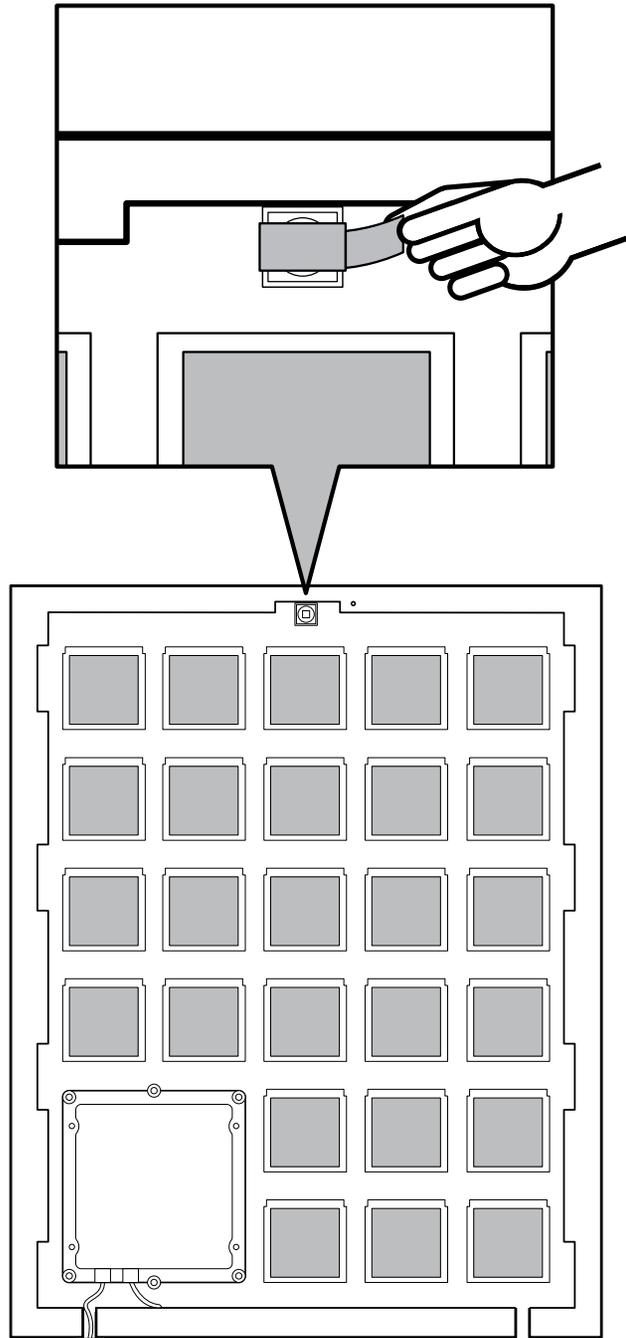


1.




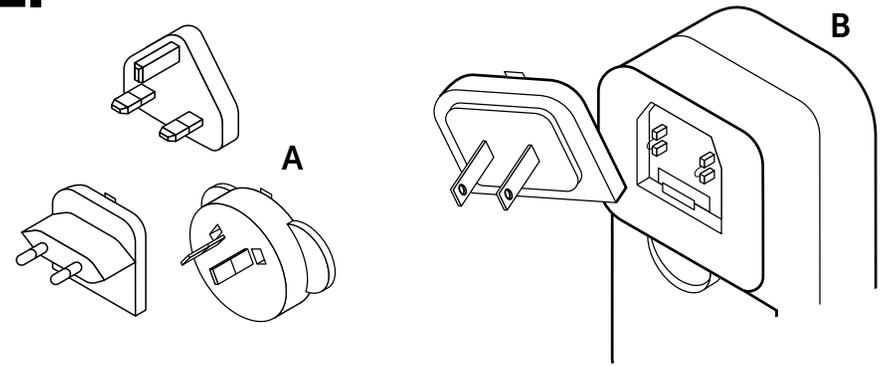


2.

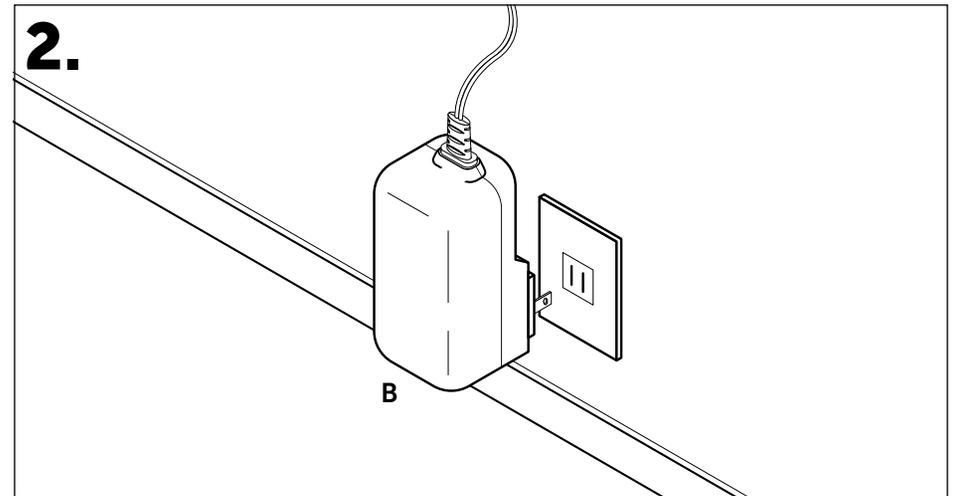

3.

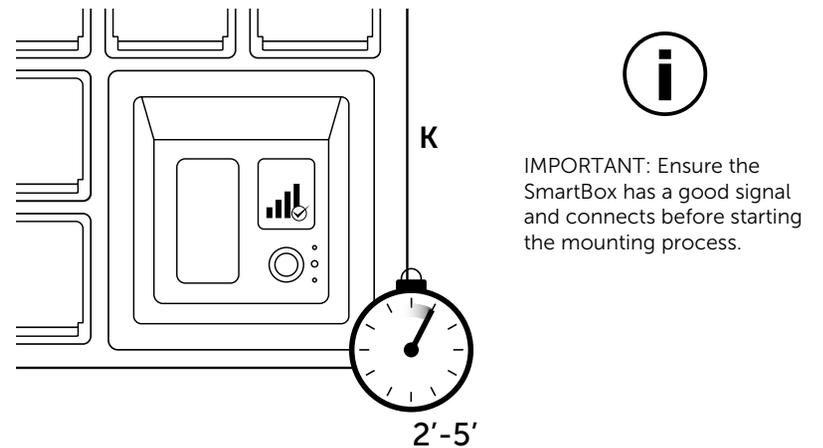

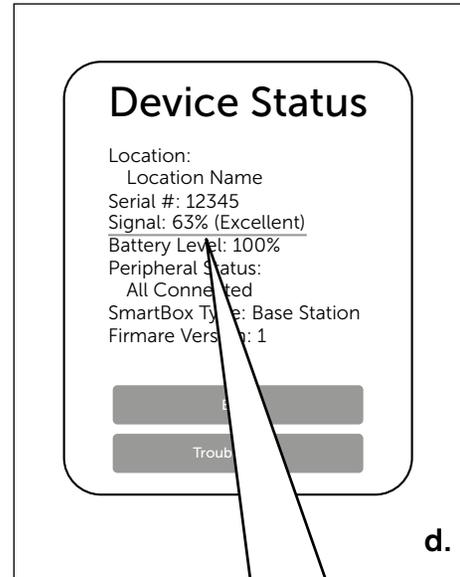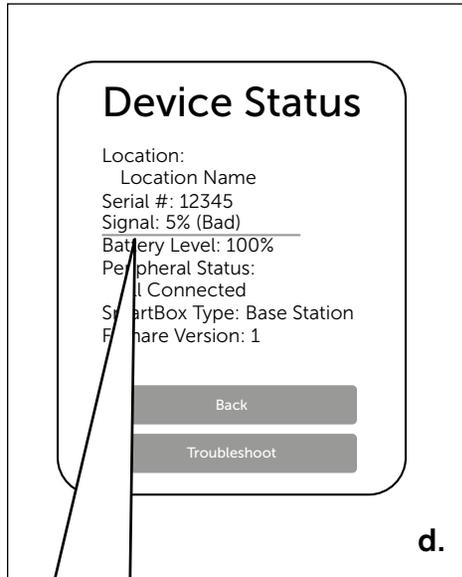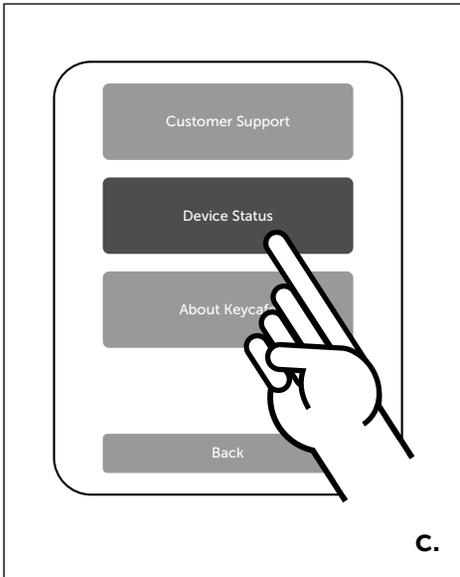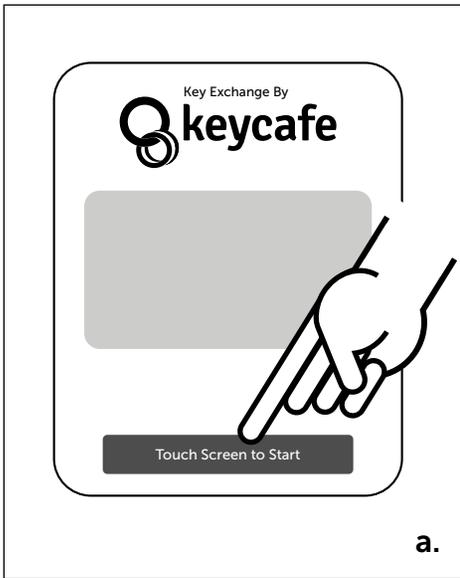


 < 10% 


DO NOT INSTALL

www.keycafe.com/help


 > 10% 


GO TO NEXT STEP